


- 3). BUR ALL EXPOSED THREADED HARDWARE TO ENSURE NUTS CAN NOT BE REMOVED.
- 4). PRIOR TO GALVANIZING, SHOP DRILL GUARDRAIL POSTS THAT RAIL BRACKETS WILL BE ATTACHED TO.
- 5). PLACE RAIL SPLICES AT RAIL SUPPORT BRACKETS, USING THE SAME BOLT TO ATTACH THE RAIL TO THE BRACKET, TO SECURE THE SPLICE TUBE.
- 6). ONLY INSTALL RAILS TO STANDARD W-BEAM SECTIONS AND AT LEAST ONE POST AWAY FROM THE PAYMENT LIMITS OF THE END TREATMENT.
- 7). FOR TYPE 2-31 GUARDRAIL, BOLT RAILING TO EVERY OTHER POST OR AT A SPACING OF 6'-3".

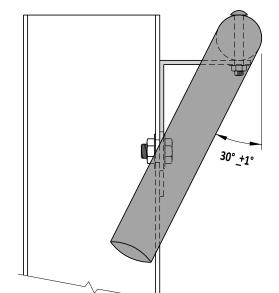



**GUARDRAIL MOUNTED RAIL** 

## **ISOMETRIC VIEW WITH START & END SECTION**



09/01/2020 **RECOMMENDED** 

STANDARD NO. B-13 (2020)

SHT.

10

OF 12 **REVIEWED** 

**APPROVED** 

09/01/2020 09/01/2020 DATE

8/19/2020